

Universal End Clearance Gauge



Part No. TOOL.05

Oil Pump Remover & End Play Checking Fixture



Part No. 4L30E.TOOL02

Stator Shaft Sealing Ring Installer & Resizer



Part No. 4L60E.TOOL01

Torx® Plus Bit For Bell Housing Bolts '98 & later with two-piece case



Part No. TH700.TOOL10

Case Insulator Remover

Removes the transmission wiring harness connector from the case.



Part No. 4T40E.TOOL01

Rear Clutch Spring Compressor

TH700, 4L60, 4L60E



Part No. TH350.TOOL01

Hydraulic Transmission Tester



Test the transmission with fluid under pressure, the Hydraulic Tester simulates operating conditions in the unit and finds problems instantly. The Hydraulic Tester finds hidden defects in soft parts or can alert you to hard parts that have grown out of tolerance. A simple hook up to a unit test plate and the reading of a single gauge allows you to test a transmission in or out of the vehicle

Part No. TOOL.139

Unit Test Plate for 4L60E

Part No. 4L60E.TOOL03

GM SPECIAL TOOLS

4L60 (TH700R4), 4L60E, 4L65E

Ac

AUTOMATIC CHOICE

Ac

THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE

Valve Body Parts Stripping Tray



Part No. TOOL.03

GM Snap Ring Removal Tool



Part No. TOOL.26

GM Pump Alignment Band



Part No. TOOL.29

Pump Alignment Band
7H700, 4L60E, TH350, Powerglide



Part No. TOOL.94

Turbine Shaft Seal Installer Kit
Works on old & new longer turbine shafts



Part No. TOOL.45

Overrun Clutch Inner Seal Protector/Installer



Part No. TOOL.52

Universal Oil Seal Removal Tool
Use with slide hammer



Part No. TOOL.41

Intermediate Band Apply Pin Gauge



To select length of apply pin. The intermediate band apply pin gauge is a go/no go setup. Only two settings right or wrong. Allows for no mistakes, a must when selecting proper pin length.

Part No. TOOL.134

A
U
T
O
M
A
T
I
C

C
H
O
I
C
E



T
H
E

A
U
T
O
M
A
T
I
C

T
R
A
N
S
M
I
S
S
I
O
N

P
A
R
T
S

W
A
R
E
H
O
U
S
E