


FORD SPECIAL TOOLS


CTX

Oil Pump Remover Tool

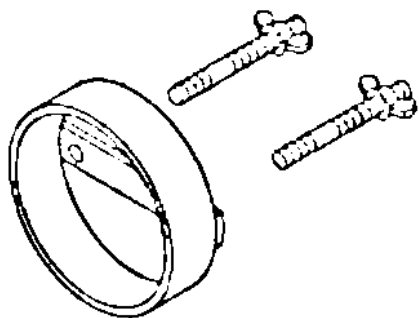


Part No. CTX.TOOL01

Primary Shaft Locking Tool

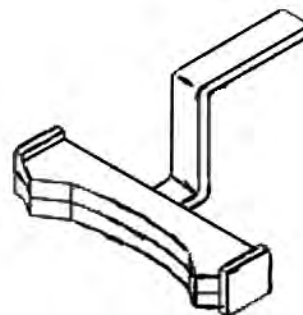


Part No. CTX.TOOL02

Secondary Bearing Removal Tool
Use With CTX.TOOL04 to Split Case

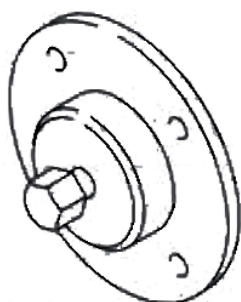


Part No. CTX.TOOL03

Primary Bearing Removal Tool
Use With CTX.TOOL03 to Split Case

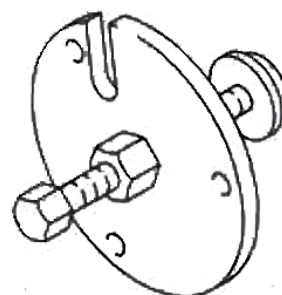


Part No. CTX.TOOL04

Forward Clutch Piston Installer

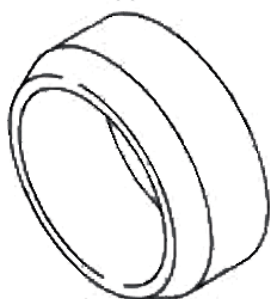

Part No. CTX.TOOL05

Reverse Clutch Piston Installer

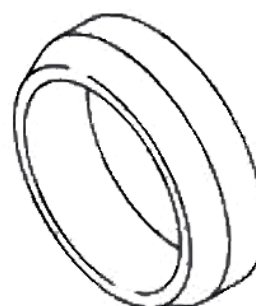

Part No. CTX.TOOL06

Camshaft Alignment Pin



Part No. CTX.TOOL07

Pressure Gauge 0-60 Bar







Part No. CTX.TOOL08



AUTOMATIC CHOICE



THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE

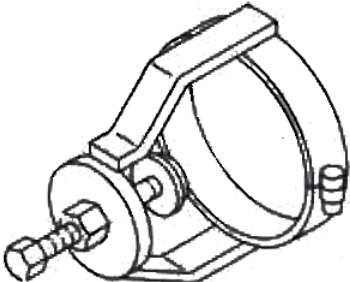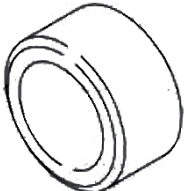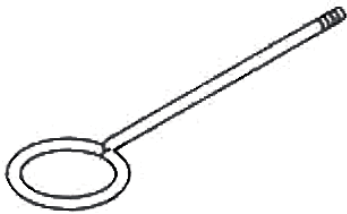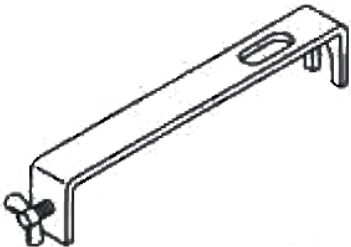FORD SPECIAL TOOLS		CTX
Pressure Gauge 0-10 Bar  Part No. CTX.TOOL10	Secondary Unit Puller Use with Spacer CTX.TOOL13  Part No. CTX.TOOL09	 AUTOMATIC CHOICE  THE AUTOMATIC TRANSMISSION PARTS WAREHOUSE
Spacer for CTX.TOOL09  Part No. CTX.TOOL13	Sensor Shaft Removal Tool  Part No. CTX.TOOL11	
Control Piston Holding Clamp  Part No. CTX.TOOL12	Valve Body Parts Stripping Tray  Part No. TOOL.03	
Universal End Clearance Gauge  Part No. TOOL.05	Universal Oil Seal Removal Tool Use with slide hammer  Part No. TOOL.41	